


Polaris Matryx Rear Bumper Installation Instructions

Part #PRB430-All Colors

2022-23 650/850 RMK Khaos Matryx Slash 146 Rear Bumper

1. Remove existing bumper. Remove reflectors on both sides. Drill the existing bolt holes out to .250 holes. Place the side plates on the machine using the new hardware included in the kit. The shorter button head screws will go in the side plates and the longer 6x20mm button head screws will go through the rear bumper grab & side plate. See picture below. Use the 3/16" holes in the side plate as a guide to drill 3/16" holes & install the supplied rivets.

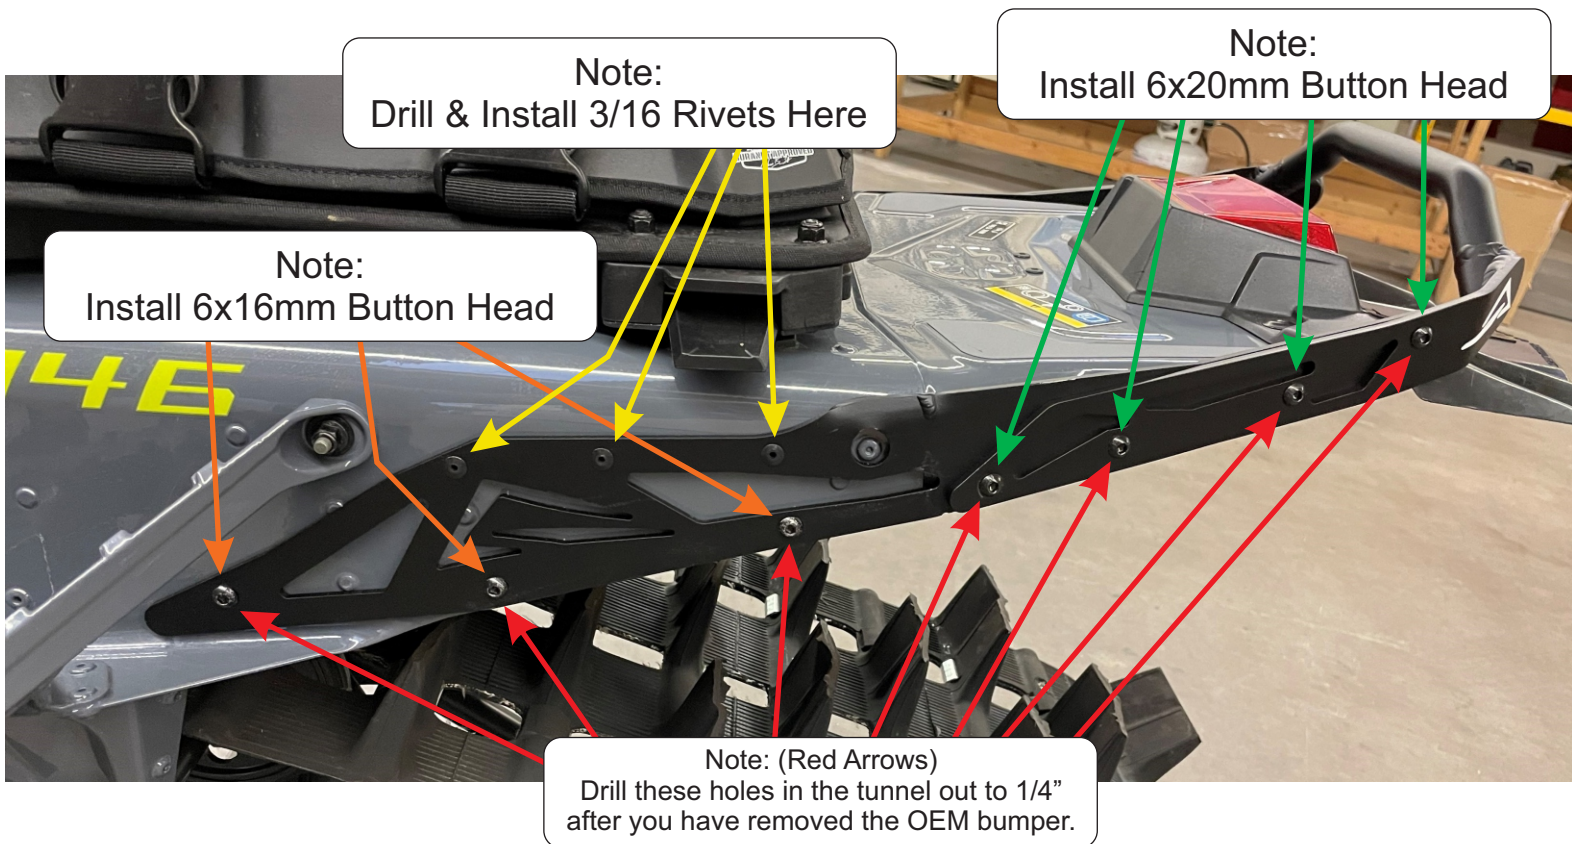

Hardware:

- 6 - 6Mx16mm button head screws black
- 8 - 6Mx20mm button head screws black
- 6 - 3/16 x 5/8" rivets black
- 14 - 6M nyloc nuts

For Technical information:
info@skinzprotectivegear.com

