

Polaris Split Throttle Block Instructions


#PSTB200-BK

1. Once you have your OEM throttle block removed from the machine, disassemble the plastic to remove the throttle switch. Remove the aluminum cover on the SPG throttle block and place the throttle switch in the machined groove and position the switch as shown below. Install the cover and the screws. You may use a very small amount on medium loctite on the screws.



Throttle Switch

2. Install the throttle block on the machine and assemble the rest just as you would the OEM. You may use a small amount of medium loctite on the bolts clamping the unit to the bars. Tighten securely.

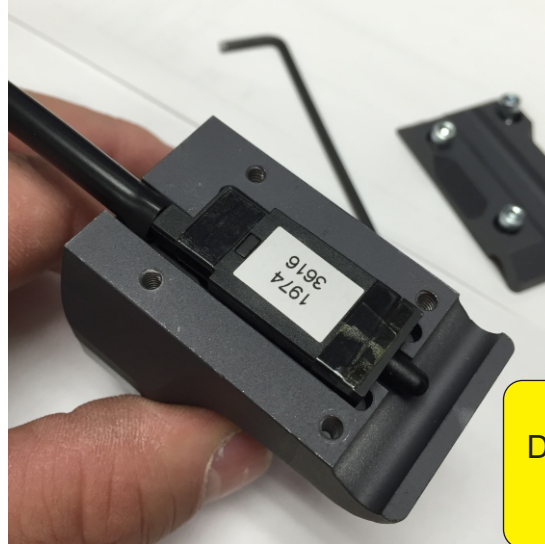

Note:
Do not overtighten the throttle block.
Only tighten as needed to prevent movement.

Polaris Split Throttle Block Instructions


#PSTB200-BK

1. Once you have your OEM throttle block removed from the machine, disassemble the plastic to remove the throttle switch. Remove the aluminum cover on the SPG throttle block and place the throttle switch in the machined groove and position the switch as shown below. Install the cover and the screws. You may use a very small amount on medium loctite on the screws.



Throttle Switch

2. Install the throttle block on the machine and assemble the rest just as you would the OEM. You may use a small amount of medium loctite on the bolts clamping the unit to the bars. Tighten securely.

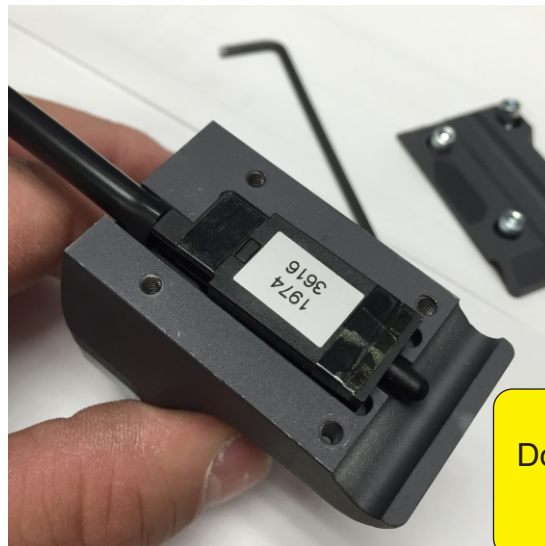

Note:
Do not overtighten the throttle block.
Only tighten as needed to prevent movement.